

OrCam[®] MyEye 2 User Manual

English

**© 2021 OrCam Technologies Ltd.
All rights reserved.**

OrCam® is the trademark and brand name of OrCam Technologies Ltd. ("OrCam") and OrCam is the sole proprietor of all the rights and all the intellectual property rights in this guide and/or any other document produced by OrCam relating thereto. The documents are protected by applicable intellectual property laws including and without limitation copyrights, patents, design patents, trademarks, know how, trade secrets, and international treaties. No license or rights are hereby transferred to the user of this guide and said guide shall remain the sole and exclusive property of OrCam. No part of this guide shall be used, reproduced, translated, converted, modified, adapted, displayed, stored in a retrieval system, communicated, or transmitted by any means, for any commercial purpose, including and without limitation, sale, resale, distribution, reproduction, license, rental, or lease without receiving written permission from OrCam.

A list of OrCam's patents can be found in <https://www.orcam.com/en/patents/>.

OrCam makes no expressed or implied representation or warranty as to the accuracy or completeness of the contents of this guide, which is provided "as is", and assumes no responsibility or liability for any errors or inaccuracies that may appear in this document or for any product that may be provided in association with this document.

OrCam devices are intended to enhance the day-to-day lives of individuals with visual impairments. They are no substitutes for existing methods or forms of assistance and should not be relied upon in circumstances that are potentially life- or health-threatening or that could lead to financial loss. OrCam devices should especially never be relied upon to drive vehicles or operate heavy machinery of any kind. Please refer to the OrCam website for additional safety information: www.orcam.com/safety.

To contact OrCam Support, please email support@orcaml.com.

For the online user manual and tutorial videos, or for tips, advice, and troubleshooting support, visit www.orcam.com/user-area.

Corporate Headquarters

OrCam Technologies 5
Kiryat HaMada St.
Jerusalem 9777513
Israel
+972.2.591.7800

United States and Canada

OrCam Inc.
1115 Broadway, 11th floor
New York, NY 10010
1.800.713.3741

United Kingdom

OrCam UK.
60 Gresham Street
London EC2V 7BB
0800.358.5323

Germany

OrCam GmbH
Gustav-Heinemann-Ufer 58
50968 Cologne
+49 (0) 211 540 138 11

China

OrCam Shanghai Technology Consulting Co., Ltd.
奥看(上海)技术咨询有限公司
1277 W. Beijing Road Guolv Building 3/F,
Jing'an Shanghai +8618621553619







    | www.orcam.com | info@orcaml.com

Table of Contents.

What's in the Box? -----	04	Features. -----	17
Read Me First. -----	05	Reading with OrCam MyEye.	
Parts and Buttons. -----	07	Smart Reading.	
Get Started. -----	09	Face Recognition	
Charging OrCam MyEye.		Product Recognition	
Turn On OrCam MyEye.		Learn New Barcodes	
Attaching the Mount.		Banknote Recognition	
Functions. -----	11	Color Recognition	
Touch the Touch Bar.		Orientation	
Swipe the Touch Bar.		General Tips.	
Long Press the Touch Bar.		Customize and Connect. -----	31
Double-Tap the Touch Bar.		Set and Tell the Time & Date.	
Pointing Gesture.		Connect to WiFi and Software Update.	
Stop Gesture.		Bluetooth Connectivity.	
Get Familiar. -----	13	Mobile App.	
Suspend Mode and Power Off.		Settings. -----	34
Enter Suspend Mode.		Audio Settings Menu	
Exit Suspend Mode.		Terms and Conditions. -----	39
Turn Off OrCam MyEye		Privacy.	
Automatic Suspend and Power Off.		Warranty.	
Setting the Volume.		Refund Policy.	
Vocal Commands.		FCC Compliance.	
Hey OrCam.			
List of Vocal Commands by Category			

What's in the Box?

1. OrCam MyEye device.
2. Quick User Guide.
3. USB magnetic adaptor piece (already inserted in micro-USB inlet).
4. 2 spare USB magnetic adaptor pieces.
5. Wall charger.
6. Magnetic charging cable.
7. Eyeglasses frame with attached magnetic mount (on the right arm of eyeglasses).
8. Cleaning cloth.
9. Mount kit with scissors and 3 magnetic mounts.
10. Carrying case and lanyard.
11. Magnet with OrCam Support Contact Information.

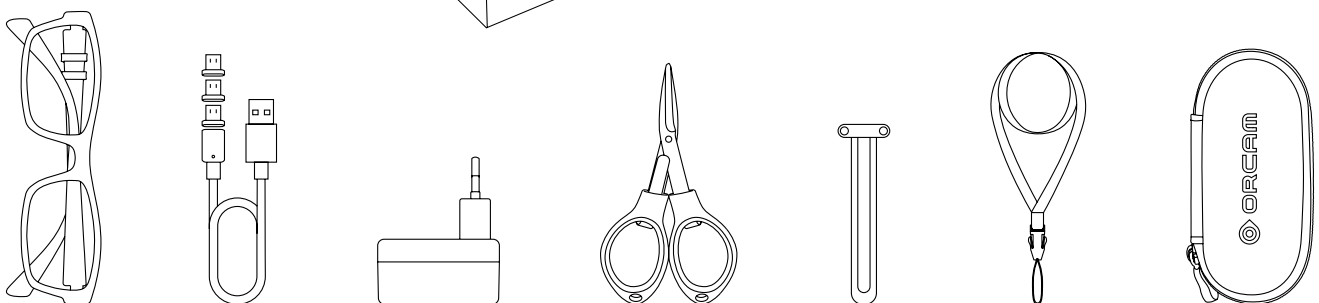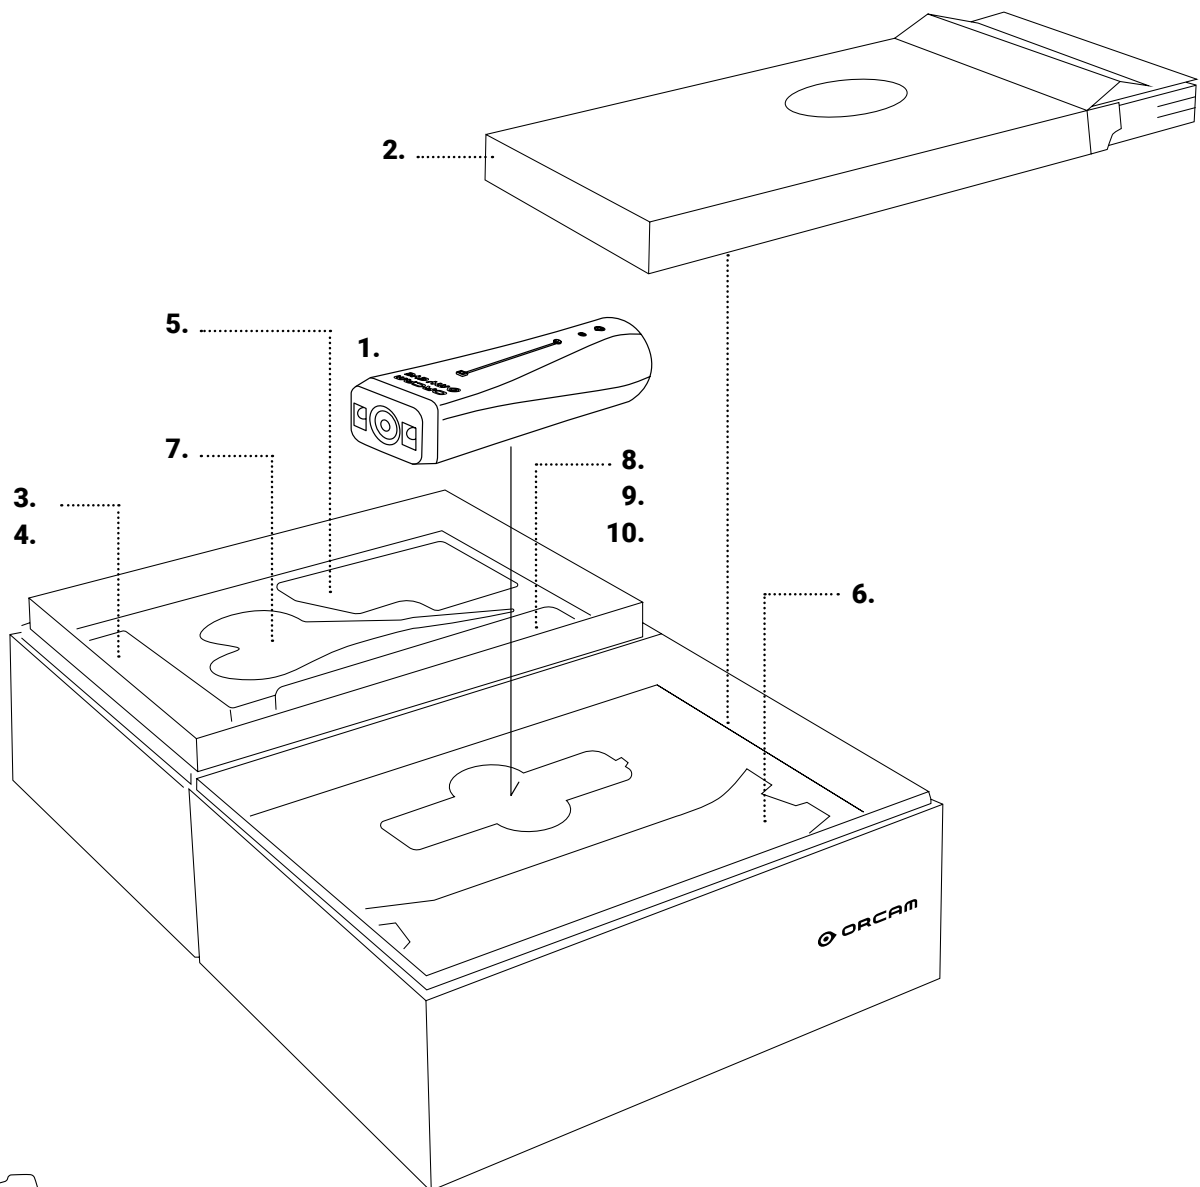

Read Me First.

Thank you for purchasing the OrCam MyEye assistive technology device!

You have chosen a highly advanced, effective – and easy-to-use – wearable solution that helps you access your world and gain increased independence.

Before beginning your journey toward increased independence, please read this manual in full before using the device to ensure safe and proper use. Follow along the instructions provided in this manual with your OrCam MyEye to best get acquainted with your device and to test to ensure that all features of your OrCam MyEye function properly.

Safety and Warnings.

- Before using your OrCam device, read these precautions carefully to avoid dangerous situations and to ensure ideal performance of your device:
- Handle your OrCam device with care. It can be damaged if dropped, burned, punctured, or crushed.
- Check that there is no physical damage to your OrCam device such as any cracks or dents in the outer casing of the device. Do not open the outer casing of the device.
- Check that the camera lens of your OrCam device is not cracked, damaged, or scratched.
- Confirm that the camera lens is not covered or dirty. Read the cleaning instructions below on how to properly clean your OrCam device.
- There are three magnetic mounts provided in the box. Should one of them be broken, do not use it; use a different one.
- Use only the charger supplied with your OrCam device. Using another charger may void your warranty and could cause severe injury to you or damage to the OrCam device.
- Check that the wall charger and charging cable are not damaged or broken.
- Do not attempt to replace the battery; you may damage it, which could cause overheating and even injury. The battery is designed to last for two years of average use (one charging cycle per day on average) after which it may need to be replaced.
- The OrCam device is designed to work in ambient temperatures between 32°F and 104°F (0°C and 40°C) and in normal conditions (Relative Humidity of 10% to 90% RH and Atmospheric Pressure of up to 2000m above sea level (700hPa)). The device can be damaged if used outside of this range. Store and transport in a cool, dry place (32°F to 104°F (0°C to 40°C) and Relative Humidity of 5% to 90% and atmospheric pressure of 700hPa to 1060hPa)). If the OrCam device overheats, the OrCam device will perform its powering-off procedure.
- The OrCam device is water-resistant but not waterproof. This means the device can withstand light rain or drizzle for short periods of time, although it is not recommended. Do not use the OrCam device in heavy rain, at the beach, near a swimming pool, or in or near a bathtub or shower. Do not submerge the OrCam device in any liquid. The OrCam device meets the standards of IP Code: IP22.
- Do not force a connector into a port or apply excessive pressure to a button. This may cause damage that is not covered under the warranty. If a connector does not insert easily, check for obstructions in the port and verify that you have the correct connector for that port. Do not combine with software, hardware, or other equipment not supplied by OrCam. Exposing the device to magnetic fields may damage the unit or erase your data.
- When using the OrCam device or charging the battery, it is normal for the device to get warm. If the unit becomes excessively hot, leaks, or gives off a burning smell, turn the device off immediately and contact OrCam Support.
- If you experience any issues operating the OrCam device, or if the device or any of its components, such as the camera lens or outer casing or charger or magnets, becomes

damaged or stops working, please contact OrCam Support and do not attempt to repair it by yourself. Only qualified OrCam personnel may repair or service or replace your device. Unauthorized repairs may void your warranty.

- OrCam recommends that the user should stay away from background noise so as to better hear the OrCam device. OrCam recommends that the user use a Bluetooth audio device such as earphones to better hear the OrCam device in loud environments.
- OrCam MyEye meets the standard requirements in the US and EU for Class 1 medical devices.
- OrCam recommends keeping the OrCam MyEye's magnets at least 6 in./15 cm. away from any implantable cardiac equipment and/or cochlear implant. If you have specific questions about use alongside an internal pacemaker and/or defibrillator and/or cochlear implant, please consult your medical professional.
- If you experience an allergic reaction to any of the elements of the OrCam device, contact a medical professional immediately.


Do not use your OrCam device:

- To read medication labeling.
- To interpret clinical tests where the results are color-based, such as strep tests or pregnancy tests.
- As a substitute for a walking stick or guide dog.

Cleaning.

Clean your OrCam device if you feel it is dirty or has been transferred between users. OrCam recommends cleaning your OrCam device at least once every two weeks, especially the camera lens. Never touch the camera lens with your finger. Clean the lens only with the supplied microfiber cloth and eyeglass cleaning fluid. Do not use any abrasive materials as this may damage the OrCam device. Do not expose the device to chemicals, such as household cleaners, aerosol sprays, solvents, alcohol, or ammonia as these may damage the OrCam device.

Parts and Buttons.

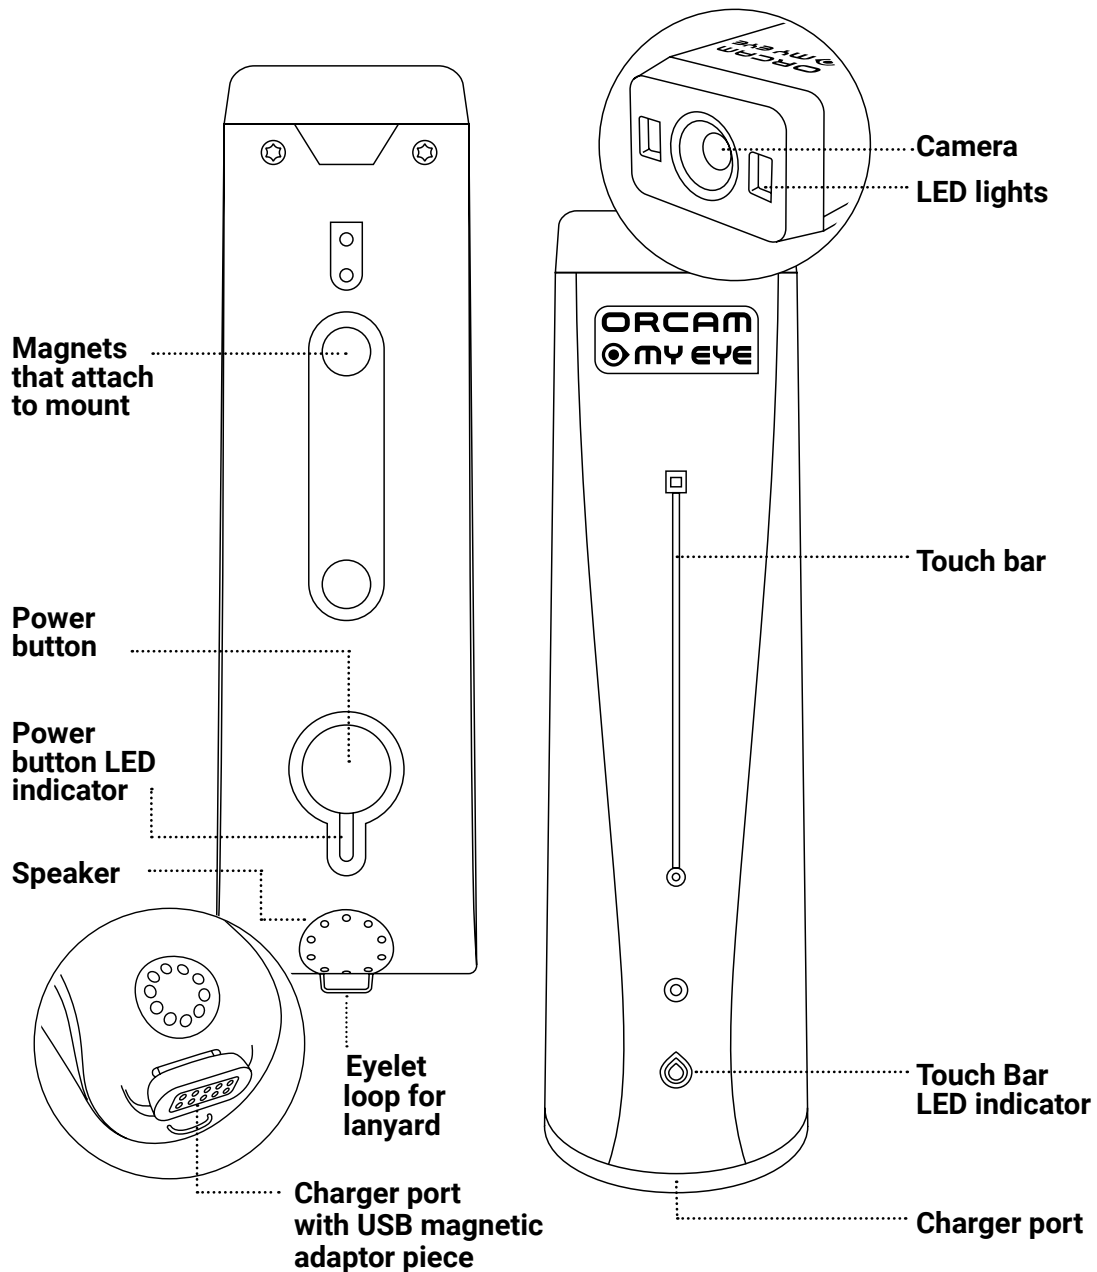

Power Button.

The power button is a recessed button on the inner side of the device, opposite the touch bar. The power button enables you to power the device and enter the audio settings menu.

Touch Bar.

The touch bar is located on the outer side of the device with an embossed line running down the middle. The majority of functions are performed with the touch bar.

LED Indicators.

There are two LED indicators, one by the power button and one by the touch bar.

Power Button LED Indicator.

When the device is powered on, and not suspended or charging, and while the device's camera is facing up toward the ceiling, the battery level is indicated by the following LED colors near the power button.


- ● Single red blink pattern: 0-25% charged
- ● ● Single red blink pattern: 25-50% charged
- ● ● ● Single red blink pattern: 50-75% charged
- Solid green: 75-100% charged

When the device is charging, the battery level is indicated by the following LED colors near the power button:

- ● Single green blink pattern: 0-25% charged
- ● ● Double green blink pattern: 25-50% charged
- ● ● ● Triple green blink pattern: 50-75% charged
- Solid green: 75-100% charged

Touch Bar LED Indicator.

The LED indicator near the touch bar will turn orange for a few seconds as the device wakes up from power off, and will turn blue upon fully awakening.

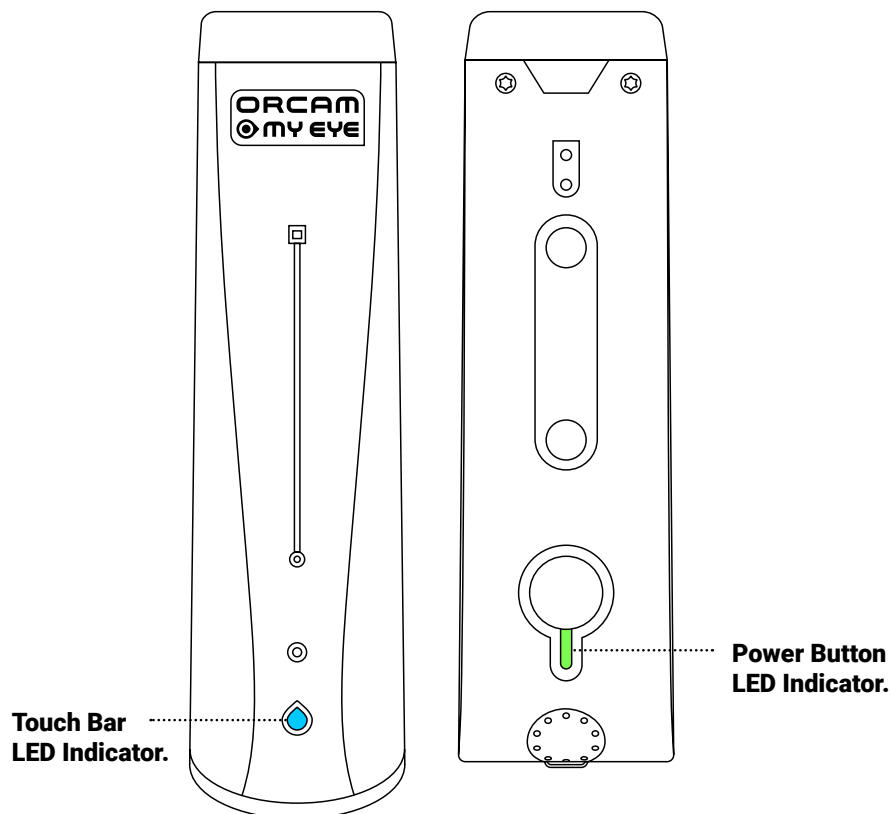

Get Started.



Charging OrCam MyEye.

Before turning on the device for the first time, OrCam recommends charging the device for at least two hours. For all subsequent charges, OrCam MyEye fully charges in approximately 40 minutes.

There are two ways to charge OrCam MyEye:

- Charge with the OrCam wall charger.
 - a. Make sure the USB magnetic adaptor piece is already installed in the micro-USB inlet. If it is not, attach the USB magnetic adaptor piece to the micro-USB inlet on the bottom of OrCam MyEye.
 - b. Connect the OrCam magnetic charging cable to the USB magnetic adaptor piece.
 - c. Plug the USB end of the magnetic charging cable into the wall charger.
 - d. Plug the wall charger into an electrical outlet.

- Charge on the go with OrCam MyCharger (sold separately). Your OrCam MyCharger can charge your OrCam MyEye as long as the OrCam MyCharger battery is not completely depleted.
 - a. Make sure the USB magnetic adaptor piece is already installed in the micro-USB inlet. If it is not, attach the USB magnetic adaptor piece to the micro-USB inlet on the bottom of OrCam MyEye.
 - b. Place OrCam MyEye into OrCam MyCharger.

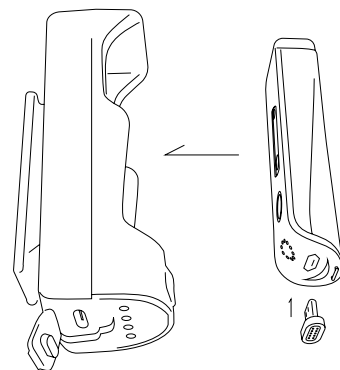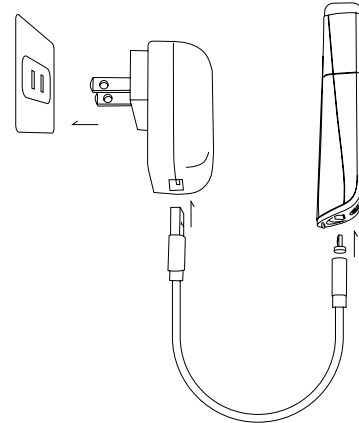


Notes on Charging and Battery Level.

- OrCam recommends using only the original OrCam charger provided.
- The OrCam MyEye charger supports 100-240 V, 50/60 Hz.
- OrCam recommends charging your device at least once a month if you do not use your device frequently.
- The device can charge when powered off, awake, and in Suspend mode. The device will wake up when charging in Suspend mode or powered off. When awake or in Suspend mode, the device will chime and announce it is charging. When powered off, the device will beep, and the Touch Bar LED Indicator will turn orange for a few seconds, turning blue upon fully awakening.
- If the OrCam MyCharger is completely depleted, you must first charge the OrCam MyCharger for at least one hour prior to use.
- If the device's battery level is too low, the device will announce, "Warning, battery is running low. Currently [xx] percent charged". When the device reaches one percent battery level, the device will announce, "Battery is too low". OrCam MyEye will then undergo its shutting down procedure.

Turn On OrCam MyEye.

1. Long press the power button for about 2 seconds. Let go of the power button once you hear the beep.
2. While the device is powering on you will hear a series of beeps.
3. The Touch Bar LED Indicator will turn orange as the device wakes up, turning blue upon fully awakening.
4. After about one minute you will hear a chime and then, "OrCam MyEye Version [xx] is ready. Battery is [xx] percent charged".

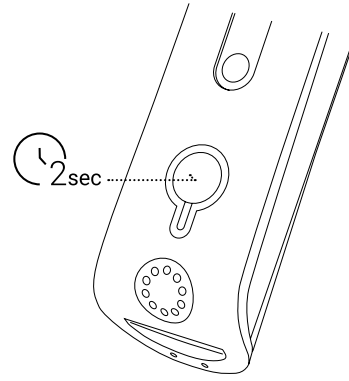

Note: If you did not hear the phrase, "OrCam MyEye Version [XX] is ready", or you are not sure that OrCam MyEye is powered on, touch the touch bar. If the device is powered on, you will hear an audio response.

Attaching the Mount.


OrCam MyEye can magnetically attach to the mount that is pre-installed on the eyeglasses provided in the box. To wear OrCam MyEye on your own pair of eyeglasses, you will need to install a small mount with magnets on the eyeglasses frame. OrCam recommends using thicker frames to better support the device. Please avoid using eyeglasses with wire frames. The following instructions were written so that you can attach the mount onto either arm of the eyeglasses without issue.

You will require:


- Your eyeglasses frame
- Your OrCam MyEye powered off
- The partially-assembled plastic mount (provided in the box)
- A pair of small scissors (provided in the box)

To attach the mount onto either arm of the eyeglasses using the partially prepared mount:

1. Insert the eyeglasses arm through the mount straps.
2. Attach OrCam MyEye to the magnetic mount to ensure that the camera is aligned with the front of the eyeglasses on the outer side of the eyeglasses arm. Remove OrCam MyEye once confirmed.
3. Remove the sticker tab from the back of the mount.
4. Press the mount onto the arm of the eyeglasses frame one index finger away from the front of the eyeglasses.
5. Pull each strap tightly to secure the mount and carefully cut off the excess straps. The mount is now attached to the eyeglasses frame and can be left there permanently. The eyeglasses can be folded with the mount in place, but not while OrCam MyEye is attached. Visit www.orcham.com/tutorials for a video tutorial to assist you in attaching the mount.

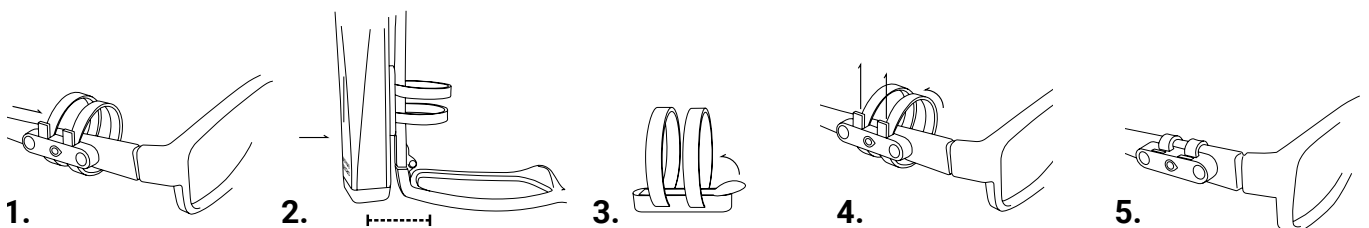


Functions.

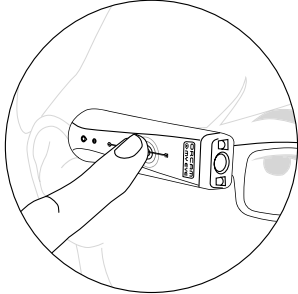


Touch the Touch Bar.

Tap your finger on the touch bar once and OrCam MyEye will read captured text, recognize people or objects, or make selections in the audio settings menu.

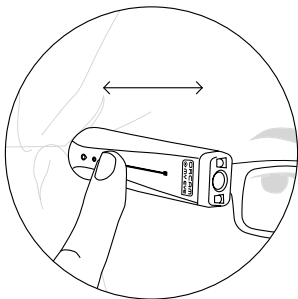


Swipe the Touch Bar.

Move your finger along the touch bar in the direction of the camera or speaker to adjust the volume, rewind or fast forward through text, or browse through the audio settings menu.

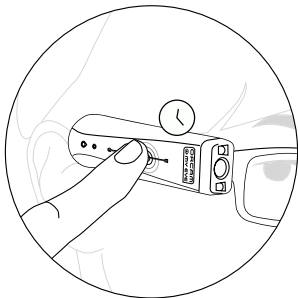


Long Press the Touch Bar.

Press and hold down your finger on the touch bar to learn new faces, products, or barcodes.

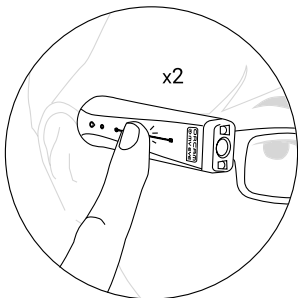

Double-Tap the Touch Bar.

Quickly tap your finger on the touch bar twice to pause or resume reading, activate vocal commands, or exit the audio settings menu.

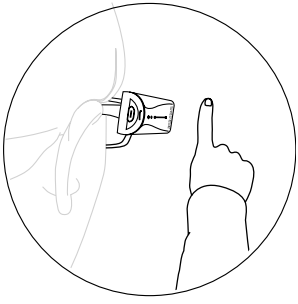


Pointing Gesture.

OrCam MyEye can recognize text, products, barcodes, banknotes, and colors through a simple point of your finger. When the camera sees your fingertip, it knows you want it to read text or recognize an object.

1. Raise the index finger of your hand, with the tip of your finger pointed up and the fingernail facing the camera.
2. Extend your arm in front of you, with your finger at eye level, and point at the area you want to read or recognize.
3. When the camera detects your finger, you will hear a double beep.
4. Move your finger away from the camera's field of view.
5. Depending on which feature you are using, OrCam MyEye will make a camera shutter sound while taking a picture of what it sees and make several beeps as it processes the picture.

Notes on Pointing Gesture.

- For color recognition, keep your finger in place until you hear the color.
- When using the pointing gesture, OrCam MyEye may inform you whether your finger is not centered with the text or object and will advise you to center your finger with the text or object.
- Avoid pointing while walking or pointing at moving texts or objects as the device may not read or recognize properly.
- When pointing, many people find it easier to touch the text, screen, or object.

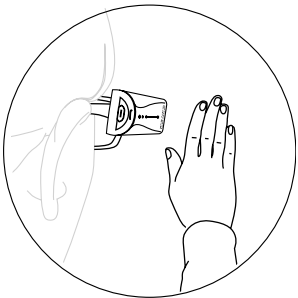

Stop Gesture.

Use this gesture when you would like OrCam MyEye to stop reading or end a learning session.

1. Extend your hand in front of your face with the back of your hand facing you and fingers pointing up.
2. Hold your hand in place for 1-2 seconds. You will hear a low double beep and OrCam MyEye will stop reading or end a learning session.

Get Familiar.


Suspend Mode and Power Off.

Enter Suspend Mode.

When the device is powered on, entering the Suspend mode allows you to conserve battery life without shutting down your device completely.

To enter the Suspend mode:


1. Press the power button once.
2. You will hear a beep and, *"Suspending. Press again to shut down"*. Do not press the power button again.
3. After a few seconds, you will hear, *"Suspended"* as the device enters the Suspend mode.

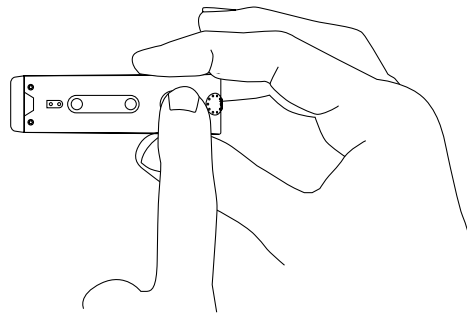

"Suspending. Press again to shut down"

Exit Suspend Mode.

1. Press the power button or double-tap the touch bar.
2. You will hear a beep and, *"Waking up. Battery is [xx] percent charged"*.

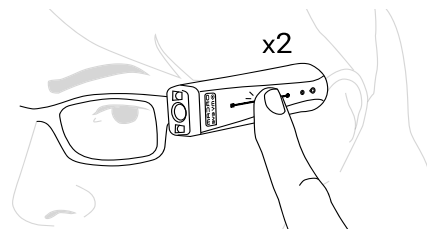

"Waking up. Battery is [xx] percent charged"

Turn Off OrCam MyEye.

1. Press the power button once. You will hear a beep and, *"Suspending. Press again to shut down"*.
2. Press the power button again. You will hear a beep and, *"Shutting down, please wait"*.
3. Just before the device shuts down, you will hear, *"Power off. Bye-bye"*.

Automatic Suspend and Power Off.



- OrCam MyEye automatically enters the Suspend mode after three minutes of inactivity. This timeframe can be adjusted to a shorter or longer timeframe in the audio settings menu.
- OrCam MyEye automatically powers itself off after three hours in the Suspend mode.

Note: When left dormant for the set "automatic suspend time", Suspend mode automatically begins and a small beep is played (no *"Suspended"* announcement will be heard), and will wake up when touched accompanied by a small beep (and not announce, *"Waking up"*).

Setting the Volume.

- Increase the volume by one level by swiping your finger forward along the touch bar, in the direction of the camera.
- Decrease the volume by one level by swiping your finger backward along the touch bar, in the direction of the speaker. OrCam MyEye will announce whether the volume level was raised or lowered, as well as when you reach the minimum or maximum volume level.


Note: You cannot change the volume while the device is reading. Performing the swipe action during reading will cause the device to read either the next or previous sentence.

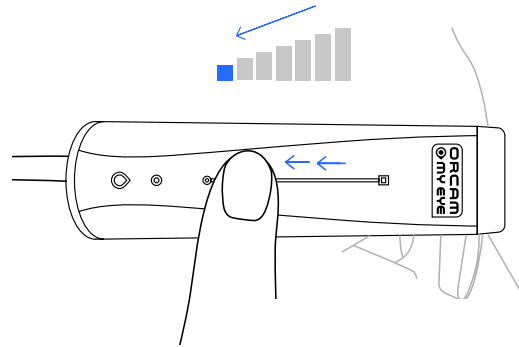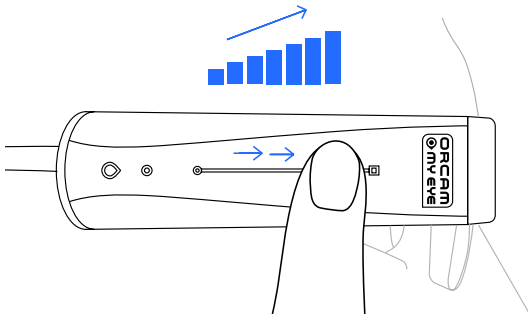

Vocal Commands.


OrCam vocal commands can be used to easily control your OrCam MyEye, change settings, and receive information. To use them:

1. Double-tap the touch bar. You will hear a long beep.
2. Say a vocal command. You will then hear a chime.
3. OrCam MyEye will then perform the requested action.

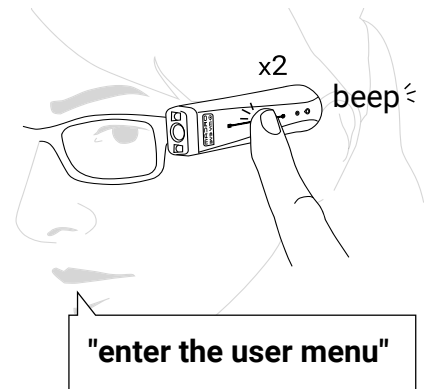

Hey OrCam.

In addition to the traditional double-tap of the touch bar, you may simply say, "**Hey OrCam**", followed by the desired vocal command. For example, you can say, "**Hey OrCam, enter the user menu**".

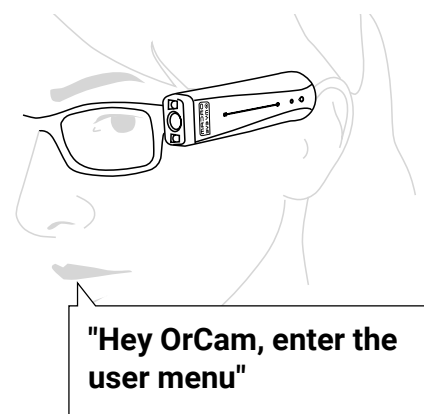

List of Vocal Commands by Category:

Category	Command	Meaning of Request
"Help" Commands	"List Help Commands"	OrCam MyEye will list the Help Commands.
	"List Information Commands"	OrCam MyEye will list of "Tell" commands, which are commands that contain the word "tell" in them. These are commands that provide specific information.
	"List Settings Commands"	Hear the list of commands will help you modify your device's settings.
	"List Smart Reading Commands"	OrCam MyEye will list of commands for the Smart Reading feature.
	"Orientation Commands"	OrCam MyEye will list the commands for the Orientation feature.
"Information" Commands	"Tell the Time"	Hear the current time.
	"Tell the Date"	Hear the current date.
	"Tell the Build" / "Tell the Version"	Hear the software version.
	"Tell the Battery Status"	Hear the battery level and whether your device is currently charging.
	"Tell the Device Serial Number"	Hear the external and internal IDs of your device.
"Settings" Commands	"Volume Up" / "Speak Louder"	Raises volume one level.
	"Volume Down" / "Speak Softer"	Lowers volume one level.
	"Reading Speed Up" / "Read Faster"	Raises the rate at which the device speaks and reads by one level.
	"Reading Speed Down" / "Read Slower"	Lowers the rate at which the device speaks and reads by one level.
	"Enter the User Menu"	Enter the audio settings menu.
	"Change the Voice"	Change the system and reading voice per language.
	"Change the Auto Suspend Time"	Choose the amount of time the device should wait in an idle state before automatically going into Suspend mode.
	"Connect to the Bluetooth Audio Device"	Start the process to connect to a Bluetooth audio device.
	"Check the Internet Connectivity"	Hear the status of the device's connectivity to the internet.

List of Vocal Commands by Category:

Category	Command	Meaning of Request
"Settings" Commands	"Enable the Reading Navigation"	Enables reading navigation, allowing you to pause, resume, fast forward, and rewind during reading.
	"Disable the Reading Navigation"	Disables reading navigation.
	"Enable the Auto Page Recognition"	Enables automatic page recognition, which will allow the device to automatically scan and read text when it is within the range and point of view of the device's camera.
	"Disable the Auto Page Recognition"	Disables automatic page recognition.
	"Enable the Auto Flash"	Enables the automatic flash feature. When enabled, OrCam MyEye will automatically flash its flashlight whenever it detects low lighting levels when capturing text.
	"Disable the Auto Flash"	Disables the automatic flash feature.
	"Start the Product Learning"	Starts the product learning process.
	"Start the Barcode Learning"	Starts the barcode learning process.
	"Start the Face Learning"	Starts the face learning process.
	"Set the Face Recognition to Auto"	Enables automatic face recognition, meaning the device will automatically recognize or identify people when they are within the range and point of view of the device's camera.
	"Disable the Face Recognition"	Disables the face recognition feature, turning off the device's ability to recognize or identify the people in front of you.
	"Change the Face Repetition Time"	Choose the amount of time you want to wait before your device announces the same person again.

Features.


Reading with OrCam MyEye.

There are 5 ways to read with your OrCam MyEye device.

1. Reading with the Touch Bar.

Preferable when you want to read a whole page or 2 pages side by side.


1. Face the text you want OrCam MyEye to read.
2. Touch the touch bar once. You will hear a single beep.
3. You will hear a camera shutter sound as OrCam MyEye takes a picture of the text.
4. OrCam MyEye will make several beeps as it processes the text.
5. OrCam MyEye will then begin reading the text and chime when done.

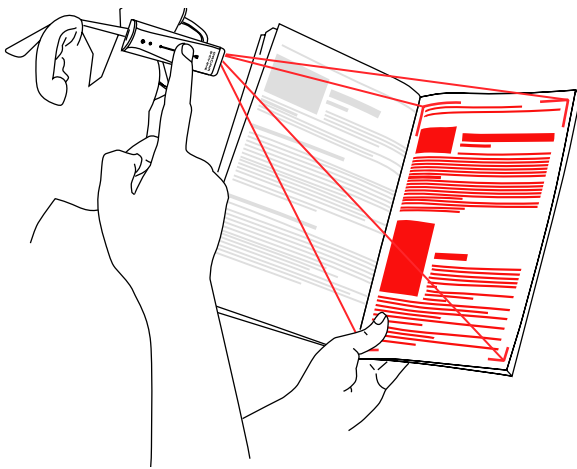

2. Reading with the Pointing Gesture.

Useful when reading specific sections of text.


1. Hold or place the text in front of your face at a distance of about 12 inches (30 cm).
2. Use the pointing gesture on the text area you want OrCam MyEye to read. Make sure your finger is in the middle of the column around a half-inch (1 cm) below the top of the section you want OrCam MyEye to read.
3. When you hear a double beep, remove your finger from the text.
4. You will hear a camera shutter sound as OrCam MyEye takes a picture of the text.
5. OrCam MyEye will make several beeps as it processes the text.
6. OrCam MyEye will then begin reading the text around 3 lines above from where your finger pointed and chime when done.

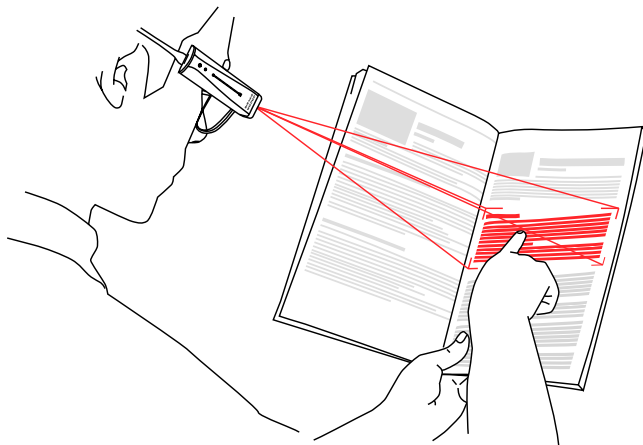

3. Automatic Page Recognition.

For hands-free reading. The default setting is off; enable via the audio settings menu.


1. Face the text you want OrCam MyEye to read.
2. Hold your position for approximately 3 seconds.
3. You will hear a camera shutter sound as OrCam MyEye takes a picture of the text.
4. OrCam MyEye will then begin reading the text and chime when done.

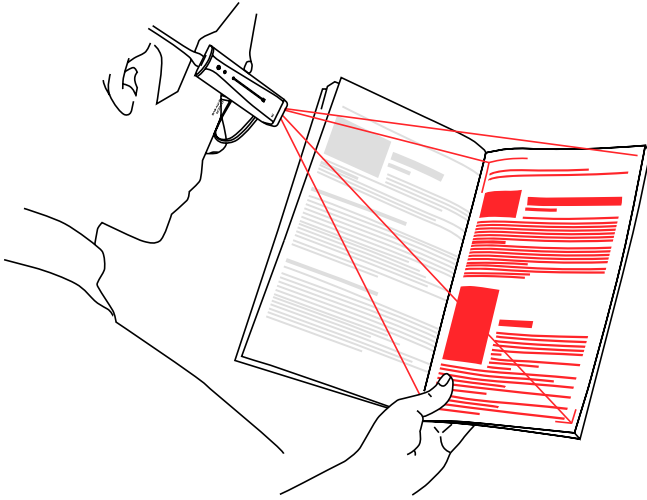

4. Touch Reading.

For reading and browsing specific lines of text, such as in menus or newspaper headlines.

1. Hold or place the text in front of your face at a distance of about 12 inches (30 cm).
2. Point and hold your finger directly under the text you want to read using the OrCam MyEye pointing gesture until OrCam MyEye beeps twice.
3. OrCam MyEye will then begin reading from about 3 lines above your finger.
4. To read a new section, slide your finger up or down, without lifting your finger, to a new spot on the page.
5. The camera will follow your finger to the next section you want to read.
6. OrCam MyEye will then double beep and start reading from the new location.

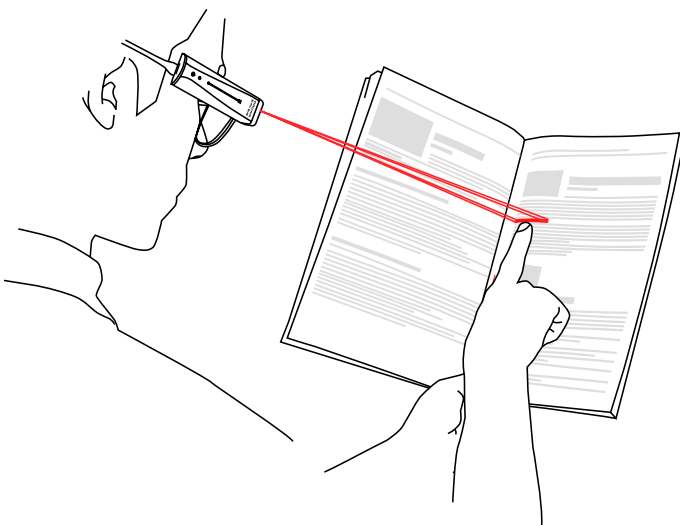

Reading Navigation.

Easily navigate any text while reading.

- To pause or resume reading, double-tap the touch bar.
- To skip to the next sentence, swipe your finger forward along the touch bar, in the direction of the camera.
- To go back to the previous sentence, swipe your finger backward along the touch bar, in the direction of the speaker.
- To stop reading, touch the touch bar once or use the stop gesture. When OrCam MyEye is finished reading, it will make a chime sound.

Note: The reading navigation functions do not work while reading in Smart Reading mode.

5. Smart Reading.

This feature is designed to help you find the information you are looking for in a faster and easier way. You can ask OrCam MyEye to read the due date and amount of your bills, read just the desserts section of a menu, read the phone number off a business card, and more. For Smart Reading to work, the System Language must be identical to the Reading Language, or Automatic Language Detection should be enabled.

To activate this feature:


1. Hold or place the text 12 inches (30 cm) in front of your face.
2. Double-tap the touch bar and say after the long beep, **“Smart Reading”**. The device will start making camera shutter sounds.
3. After the device says, *“Ready”*, the device will always be listening. There is no need to subsequently double-tap the touch bar before every vocal command.
4. Say a vocal command.
5. If you wish to say a new command while the device is reading, touch the touch bar once or use the stop gesture and the device will return to *“Always Listening”* mode.
6. To exit this feature, either say, **“Exit”** or long press the touch bar for 5 seconds and then release. OrCam MyEye will say, *“Exiting”* as it exits the Smart Reading feature

List of Smart Reading Vocal Commands:

Command	Meaning of Request
"Help"	OrCam Read will list all the Smart Reading vocal commands.
"Restart"	OrCam Read will recapture the image.
"Volume Up"/ "Speak Louder"	OrCam Read will raise its volume by one level.
"Volume Down"/ "Speak Softer"	OrCam Read will lower its volume by one level.
"Reading Speed Up"/ "Read Faster"	OrCam Read will read at a faster rate.
"Reading Speed Down"/ "Read Slower"	OrCam Read will read at a slower rate.
"Read Everything"	OrCam Read will read all captured text.
"Start from 'X'"/ "Jump to 'X'"	OrCam Read will start reading from the specified word. Note: 'X' is a placeholder for the word you are searching.
"Find 'X'"	OrCam Read will find and read all instances of the specified word. Note: 'X' is a placeholder for the word you are searching.
"Read the Dates"	OrCam Read will read all dates listed.
"Read the Phone Numbers"	OrCam Read will read all phone numbers listed.
"Read the Amounts"	OrCam Read will read all currency amounts listed. The currently supported currencies are: <ul style="list-style-type: none">• \$ Dollar currencies• € Euro• £ British Pound• ¥ Japanese yen
"Read the Headlines"	OrCam Read will only read the headlines
"Read Article Number 'X'"	OrCam Read will read the specified article, whether article one or ten. Note: "X" can be numbers 1 to 10.
"Read the 'X' Article"	OrCam Read will read the article you specified, whether the first or tenth article. Note: This command can be used up to the tenth article.
"Read the Article about 'X'"	OrCam Read will read the article containing the specified word in the headline. Note: "X" is a placeholder for the word you are searching.
"Repeat"	OrCam Read will read the current instance. Note: This command works in tandem with all the reading commands.
"Previous"	OrCam Read will read the previous instance. Note: This command does not work in tandem with the following commands: <ul style="list-style-type: none">• "Read Everything"• "Start from 'X'"• "Jump to 'X'"
"Next"	OrCam Read will read the next instance. Note: This command does not work in tandem with the following commands: <ul style="list-style-type: none">• "Read Everything"• "Start from 'X'"• "Jump to 'X'"
"Exit"	OrCam MyEye will exit the Smart Reading feature.

Notes on Smart Reading.

- Reading navigation does not work while using the Smart Reading feature.
- While awaiting your command, OrCam MyEye will repeatedly announce, "I am listening" to indicate it is still within the Smart Reading feature.
- OrCam MyEye may ask you to confirm whether you meant to say a specific command. Say, "Yes" to confirm and OrCam MyEye will continue with said command. If you did not say the said command, say, "No" and OrCam MyEye will return to "Always Listening" mode.

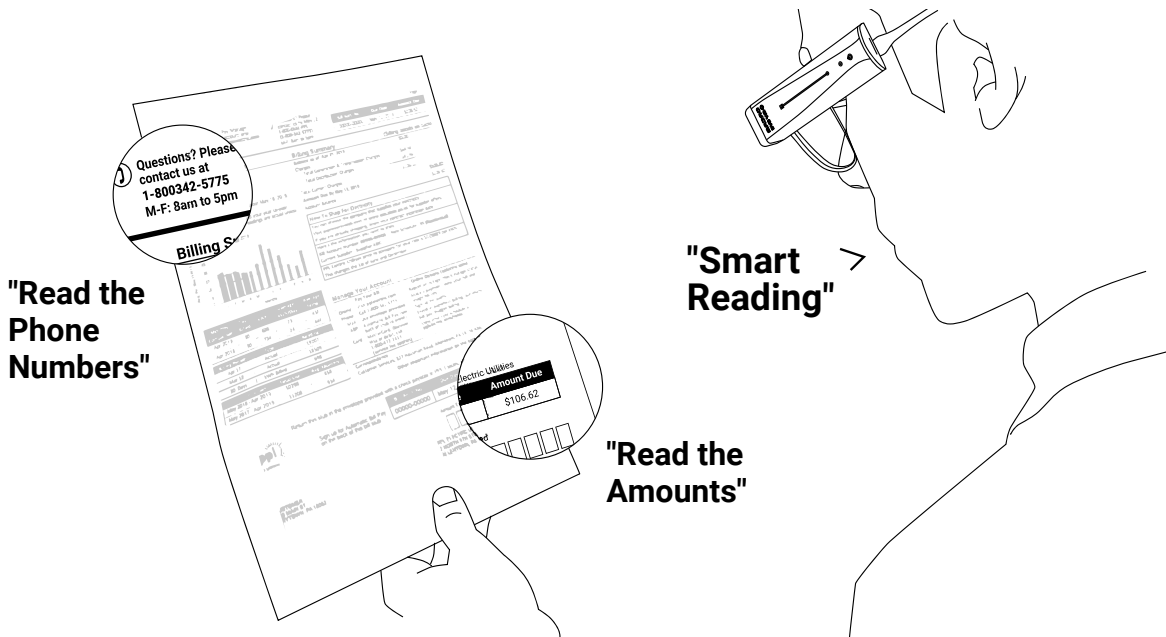

Face Recognition.¹

This feature will help you recognize the people in your life.

Face Detection.

You can personalize your OrCam MyEye by teaching it to recognize the people you know, which can be helpful when you need to identify people such as friends, family, and co-workers.

In addition, the face recognition feature can announce any unfamiliar persons by announcing whether there is a child, young man or woman, man or woman, or multiple people in front of you. There are three modes of recognition that you can set in the audio settings menu or by using one of the face recognition settings vocal commands. You can also disable the feature so that the device will not attempt to detect any faces.

- Manual: Touch the touch bar for the device to recognize learned faces or detect unknown faces.
- Automatic: The device will automatically recognize learned faces.
- Fully Automatic: The device will automatically recognize learned faces. Should there be a face or multiple faces the device does not recognize, the device will announce either the gender of the unknown face that is in front of you or how many people are in front of you


Learn New Faces.

1. Stand approximately 3 feet (1 meter) from the person you want OrCam MyEye to learn and direct your OrCam MyEye toward their face.
 2. Long press the touch bar. The device will start making camera shutter sounds. Carefully follow the audio instructions.
 3. While recording the person's face, ask them to speak, tilt or turn their head slowly in different directions, and make a few facial expressions. This will help OrCam MyEye record several views of the person in order to recognize them from different angles.
 4. When you are done, after 15-30 seconds, remove your finger from the touch bar.
 5. OrCam MyEye will chime and ask you to say the person's name after the beep.
 6. After the long beep, say the name of the person.
 7. After a few seconds, OrCam MyEye will repeat your recording.
 8. Touch the touch bar to confirm the name or swipe the touch bar to record the name again. You may also double-tap the touch bar to abort the whole process.
 9. Upon confirmation, OrCam MyEye will chime and announce, "Person learned".
- Each time OrCam MyEye recognizes a learned face, it will replay your recording.

¹ Only available upon purchase.

Notes on Face Recognition.

- OrCam MyEye can only learn one face at a time.
- For best results, make sure to learn one face at a time in an area with good lighting.
- During the learning session, OrCam MyEye will announce if there are too many faces detected and request that you focus only on one face. OrCam MyEye will cancel the learning session should it continue to detect more than one face.
- During the learning session, using the stop gesture will end the learning session. OrCam MyEye will make a low, double beep sound to indicate it has ended the learning session.
- If OrCam MyEye fails to recognize a previously learned person, you can re-learn that face by following the instructions titled "Learn New Faces".
- If face learning is at first not successful, OrCam MyEye will assist you by announcing whether the person is too close or too far away or is not centered to you or is not facing you.
- OrCam MyEye can learn up to 100 faces.

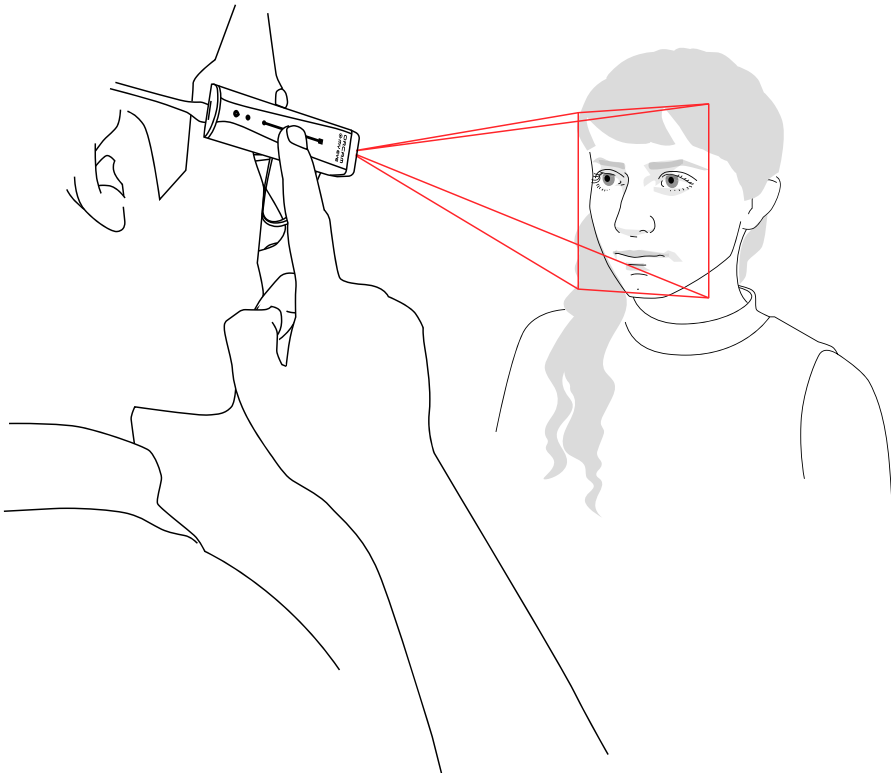


Product Recognition.²

This feature will help you recognize products and objects you use.

Learn New Products.

1. Hold or place the product you wish to learn 12 inches (30 cm) in front of your face.
2. Direct your OrCam MyEye to one side of the product.
3. Long press the touch bar until you hear OrCam MyEye chime and announce, *"Start new product learning. Please point at the product three times at different positions"*.
4. Point at the center of one side of the product until you hear a double beep.
5. Remove your finger. Wait for the camera shutter sound.
6. Now point again at the product in a different position. For example, bring it closer to you or place the product against a different background.
7. Repeat steps 4 through 6 two more times.
8. OrCam MyEye will announce, *"Done with this side. You may point three times at another side of the product or stop now"*.
9. To learn another side of the product, repeat steps 4 through 7 on the new side.
10. Once you have completed learning as many sides of the product as you would like, wait 3-5 seconds.
11. OrCam MyEye will announce, *"Thank you. Please name the product after the beep"*.
12. After the long beep, say the name of the product.
13. After a few seconds, OrCam MyEye will repeat your recording.
14. Touch the touch bar to confirm the name or swipe the touch bar to record the name again. You may also double-tap the touch bar to abort the whole process.
15. Upon confirmation, OrCam MyEye will chime and announce, *"Learning done; product added"*. Each time OrCam MyEye recognizes a learned product, it will replay your recording.

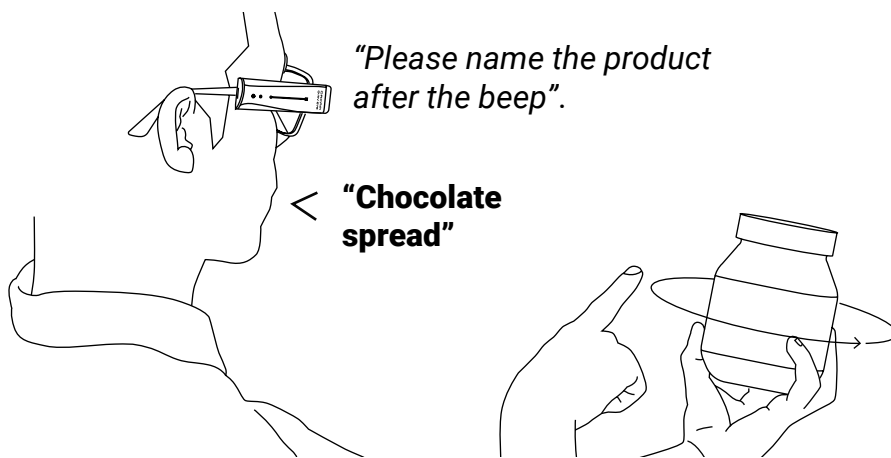


Notes on Product Learning.

- During the learning process, touching the touch bar or using the stop gesture will end the learning session. If you touch the touch bar, OrCam MyEye will chime and say, *"Cancelling Learning"*. If you use the stop gesture, OrCam MyEye will make a low, double beep sound to indicate it has ended the learning session.
- During the learning process and after pointing 3 times, the device might say, *"Let's try again"* if it does not have enough images for learning the product. Repeat steps 4 through 7 until your device announces it has learned one side of the product.
- If you do not continue the learning process for at least 5 seconds, OrCam MyEye will announce, *"No touch and no product detected; cancelling"*. OrCam MyEye will then end the learning session.

² Only available upon purchase.

Recognize Learned Products.

1. Hold or place the learned product 12 inches (30 cm) in front of your face.
2. There are two ways to activate your OrCam MyEye to scan the product:
 - Manual activation: Touch the touch bar. You will hear a beep.
 - Pointing gesture: Point at the product until you hear a double beep. Remove your finger from the area.
3. You will hear a camera shutter sound as OrCam MyEye takes a picture of the product.
4. OrCam MyEye will replay your recording of the product name.

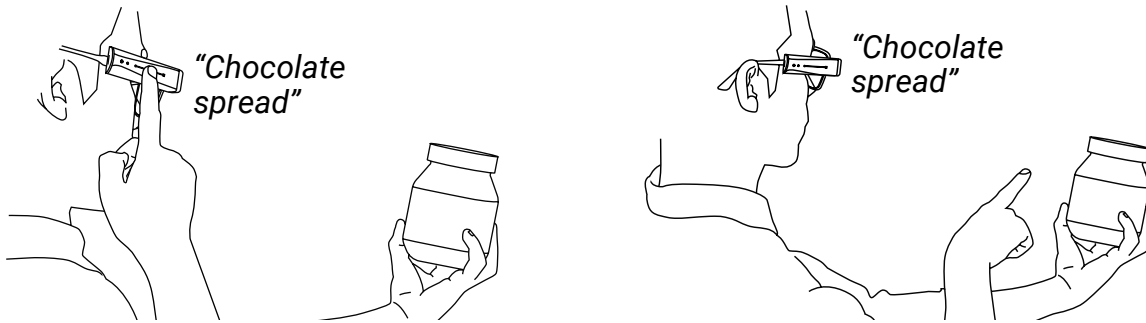

Learn New Barcodes.

1. You can teach OrCam MyEye to learn barcodes of products instead of the product itself. To learn a new barcode:
2. Hold or place the barcode you wish to learn 12 inches (30 cm) in front of your face.
3. Long press the touch bar until you hear the device make camera shutter sounds and then beep.
4. OrCam MyEye will announce, *"Learning product using barcode. Please name the product after the beep"*.
5. After the long beep, say the name of the product.
6. After a few seconds, OrCam MyEye will repeat your recording.
7. Touch the touch bar to confirm the name or swipe the touch bar to record the name again. You may also double-tap the touch bar to abort the whole process.
8. Upon confirmation, OrCam MyEye will chime and announce, *"Learning done; product added"*.
9. Each time OrCam MyEye recognizes a learned barcode, it will replay your recording.

Notes on Barcode Learning.

- OrCam MyEye will announce whether there are too many barcodes detected, and will not start barcode learning.
- During the learning process, touching the touch bar or using the stop gesture will end the learning session. If you touch the touch bar, OrCam MyEye will chime and say, *"Cancelling Learning"*. If you use the stop gesture, OrCam MyEye will make a low, double beep sound to indicate it has ended the learning session.
- OrCam MyEye will announce if it has failed to attempt learning a product's barcode. Refer to the instructions for *"Learn New Barcodes"* to learn the barcode.


Recognize Products with Barcodes.

Use this feature to recognize products based on their barcode.

1. Hold or place the barcode 12 inches (30 cm) in front of your face.
2. There are three ways to activate your OrCam MyEye to identify the barcode:
 - Manual activation: Touch the touch bar. You will hear a beep.
 - Automatic barcode recognition: Direct OrCam MyEye toward the barcode for a few seconds.
 - Pointing gesture: Point at the barcode until you hear a double beep. Remove your finger from the area.
3. OrCam MyEye will make a camera shutter sound as it takes a picture of the barcode.
4. OrCam MyEye will announce the product name if it is learned or available within the internal, preloaded database.

Notes on Product and Barcode Recognition.

- OrCam MyEye can best identify products between the size of a playing card and a cereal box.
- OrCam MyEye may struggle to identify products with few distinct features such as wallets or fruits.
- OrCam MyEye can learn from one to four product sides. OrCam MyEye can only identify learned sides.
- Use the pointing gesture for barcodes on small objects to better focus OrCam MyEye.
- The set of barcodes already preloaded onto the device's internal database is dependent on your locale.
- If OrCam MyEye does not recognize a barcode, the device will announce, *"Unfamiliar barcode"*. You can refer to either the instructions for *"Learn New Products"* to learn the product or the instructions for *"Learn New Barcodes"* to learn the barcode.
- Do not use the instructions for *"Learn New Products"* to learn a new barcode. Refer to the instructions for *"Learn New Barcodes"* to properly learn barcodes.

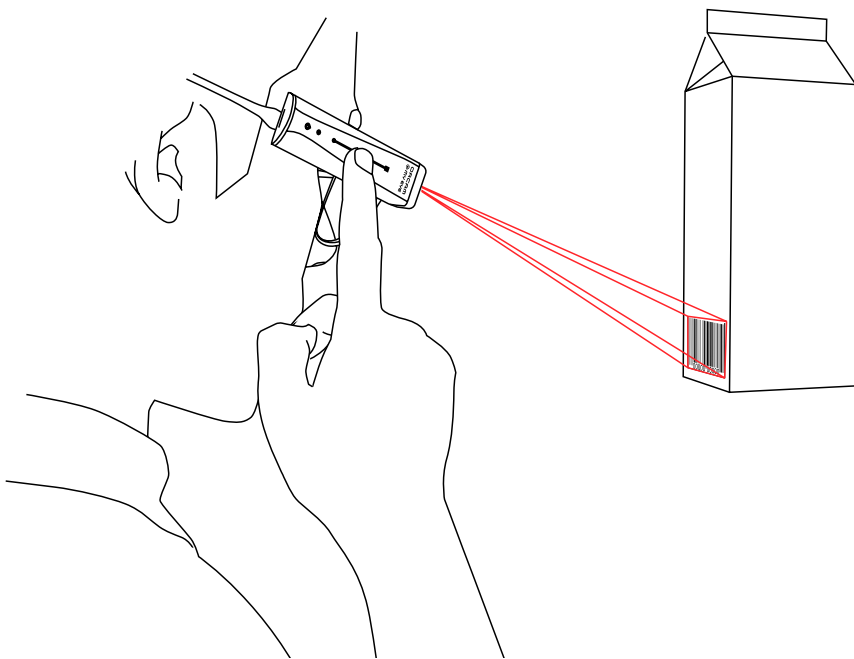


Banknote Recognition.³

Helps you identify local banknotes.

1. Hold or place the banknote 12 inches (30 cm) in front of your face.
2. There are three ways to activate your OrCam MyEye to identify the banknote:
 - Manual activation: Touch the touch bar. You will hear a beep.
 - Automatic banknote recognition: Direct your OrCam MyEye toward the banknote for a few seconds.
 - Pointing gesture: Point at the banknote until you hear a double beep. Remove your finger from the area.
3. OrCam MyEye will make a camera shutter sound as it takes a picture of the banknote.
4. Upon recognizing the banknote, OrCam MyEye will announce the banknote's denomination.

Notes on Banknote Recognition:

- OrCam MyEye is programmed to identify your locality's banknotes. To add other banknotes, follow instructions for "*Learn New Products*".
- You can enable or disable which banknotes you would prefer the device to recognize in the audio settings menu.
- When using the pointing gesture to identify the banknote, do not point at the banknote's serial number as OrCam MyEye might read the serial number instead of announcing the banknote's denomination.

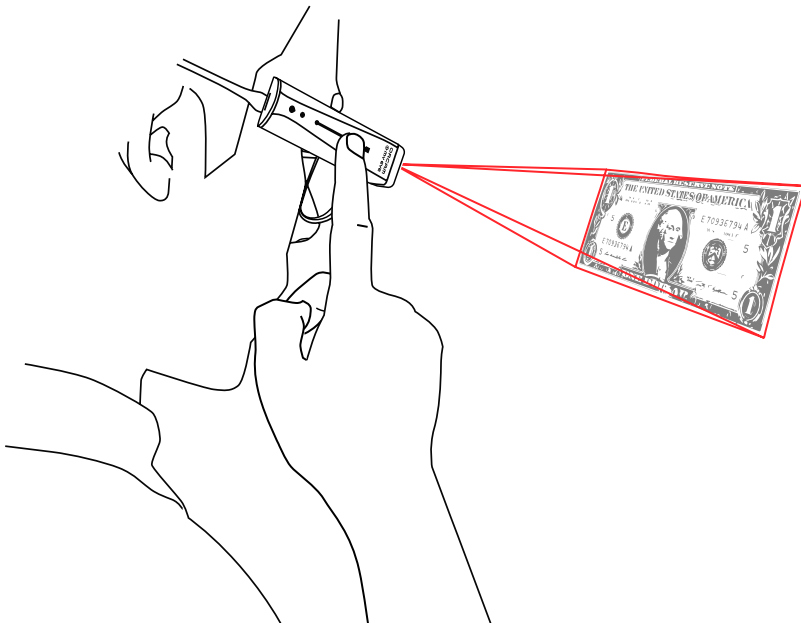


³ Only available upon purchase.

Color Recognition.⁴

Your OrCam MyEye can detect different colors.

1. Place the colored surface 12 inches (30 cm) in front of your face.
2. Point at the colored surface using the pointing gesture. You will hear a double beep.
3. Keep pointing your finger at the colored surface until OrCam MyEye announces the color. OrCam MyEye will chime when done.

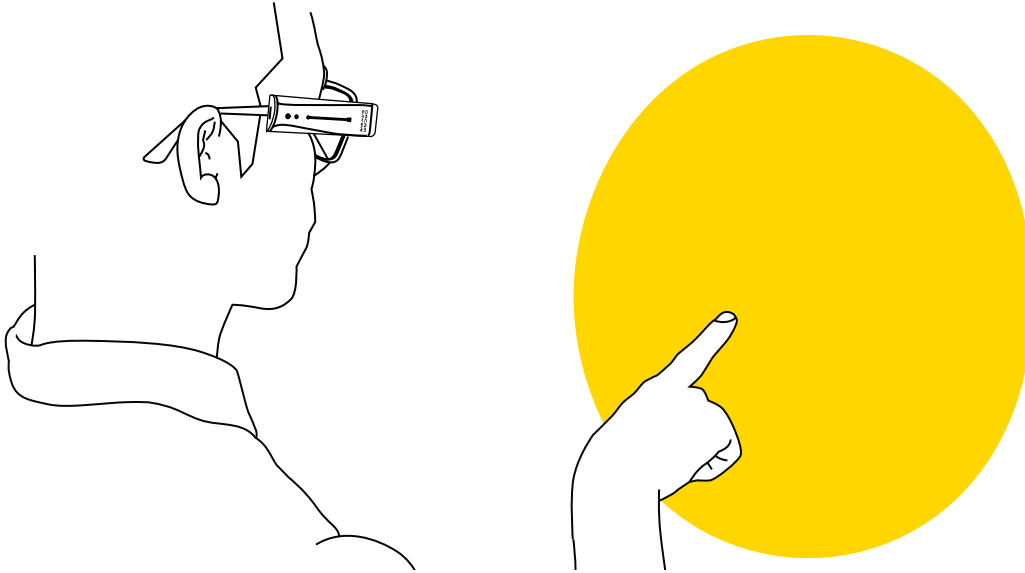

Orientation.⁵

This feature helps you to orient within your surroundings. OrCam MyEye announces those objects that are between 6 and 30 feet (2 and 9 meters) away in front of you.

OrCam MyEye can identify the following objects:

- Doors
- Chairs
- Round Containers, such as cups, jars, and bottles
- Ascending Stairs
- Digital Screens
- Tables

To activate this feature:

1. Make sure that the camera is facing the area of interest.
2. Double-tap the touch bar and say after the long beep, **“What’s in front of me”**.
3. The device will announce which objects were identified, how many objects, and their relative locations. For example: *“A table in the center and 2 chairs, one to the left and one to the right”*.
4. The device is now in “Always Listening” mode. There is no need to double-tap the touch bar before saying any further vocal commands.
5. To identify additional objects in your surroundings, either say, **“Repeat”**, or, **“What’s in front of me”**.

⁴ Only available upon purchase.

⁵ Orientation is currently in its Beta Stage. Only available upon purchase.


6. There are 3 ways to exit this feature:

- Say, **"Exit"**.
- Use the stop gesture.
- Long press the touch bar for 5 seconds and then release.

Note: The only vocal commands available to the Orientation feature are the 3 listed in the section. Using other vocal commands will not work when the Orientation feature is activated.



"A table in the center and 2 chairs, one to the left and one to the right."

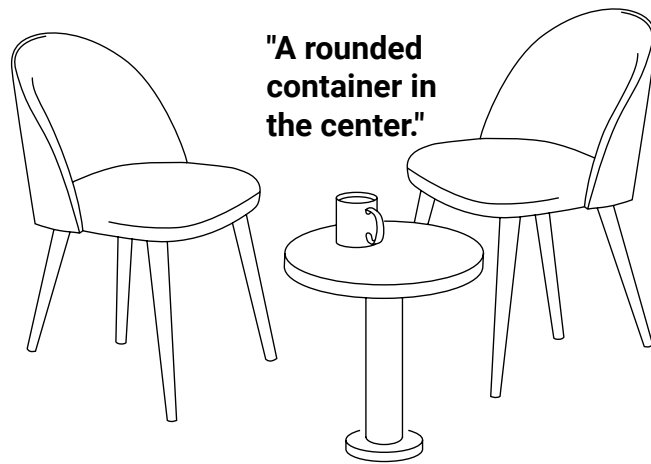

General Tips.

- For best detection, ensure that the camera lens is directly facing the text or people or object, and the lens is not covered or dirty. The camera can only read text or recognize people or objects in its field of view.
- When the camera detects your finger, you will hear a double beep. A high-pitched beep indicates you are pointing at the center of the camera's field of view. The beep becomes gradually lower-pitched as you approach the margins of the frame.
- When reading or recognizing, remove your finger from the page or item once you hear the beep so that the camera can take a picture. This is not the case when using the color recognition feature.
- Make sure you do not move the texts or objects while OrCam MyEye is taking a picture.
- Avoid any sudden head movements so that OrCam MyEye can capture the text, object, or immediate surroundings in the highest possible quality.
- For optimal use of automatic page recognition, make sure at least 3 edges of the page are in the camera's field of view.
- OrCam MyEye will inform you whether the text is upside down, the environmental lighting is too dark, or it is unable to read the text.
- If you attempt to perform a feature and OrCam MyEye responds with a double beep, then the device is informing you that no action has taken place.
- If you are having trouble keeping the text steady, a book holder is recommended. For more tips, advice, and troubleshooting support, visit the following sites:
User Area: <https://www.orcam.com/user-area/>.
Tutorial Videos: <https://www.orcam.com/online-tutorials/>.

Customize and Connect.

Set and Tell the Time & Date.

- There are three ways to set the internal clock of your device:
 - Go to the Time Set page on the website: www.orcam.com/timeset. Use the pointing gesture to the OrCam Please command on the screen.
 - Set the time manually through the audio settings menu.
 - The time will automatically be set or updated when your device is connected to WiFi or the "MyEye 2" app.
- To hear the current time, use the watch gesture by raising your hand upward with your fist closed and the back of your hand and wrist facing you, as if looking at a wristwatch. Hold your position for a few more seconds to also hear the current date. After a few seconds, OrCam MyEye will announce the current time and/or date.



Note: If your country of residence changes clocks for daylight saving time, upon daylight saving time beginning or ending, OrCam recommends following the instructions above to accurately set the time on your device.

Connect to WiFi and Software Update.

OrCam MyEye can automatically update its software over WiFi. Connecting your OrCam MyEye to a WiFi network ensures that your device will install the latest software updates throughout the warranty period. During the warranty period, these updates are free of charge and typically include software improvements for the device's existing functionalities. They will not include new features that may be available in the future. The device must be connected to the charger throughout the downloading process in order to receive the software updates.

To enable automatic software updates, make sure you are in a location with a WiFi network that you can access. You will need to know the WiFi network name and password, as well as connect your device to the charger, before beginning this process. Please note that OrCam MyEye only supports 2.4 GHz WiFi, not 5 GHz WiFi.

To connect to a WiFi network:

1. On your computer or smartphone:
 - a. Go to www.orcam.com/wifiset.
 - b. Follow the instructions on the screen to set your WiFi network.
 - c. A QR code will appear on the screen.
2. With your OrCam MyEye:
 - a. Connect OrCam MyEye to the charger.
 - b. Hold OrCam MyEye in front of the screen (computer screen about 12-16 in [30-40 cm]; smartphone screen about 6-8 in [15-20 cm]) in order to scan the QR code.
 - c. To read the QR code, either touch the touch bar or point your index finger at the QR code on the screen. OrCam MyEye will chime and make several beeps as it scans the QR code and connects to the WiFi network. OrCam MyEye will announce when it is connected.

Once you have connected to your WiFi network, OrCam MyEye will check for software updates every time you connect it to the charger in the area of your WiFi network and automatically install the newest updates that are available in your locality.

Bluetooth Connectivity.

Use Bluetooth to connect your OrCam MyEye to an external speaker or earphones.

1. On the speaker or the earphones:
 - a. Press the Bluetooth pairing button. You will receive an audio response from the speaker or earphones.
2. With your OrCam MyEye:
 - a. Enter the audio settings menu. Go to **Connectivity Settings Menu**, then to **Bluetooth Settings Menu**.
 - b. Select *"Touch to connect to a Bluetooth audio device or swipe for other settings"*.
 - c. OrCam MyEye will list all available Bluetooth devices.
 - d. Swipe the touch bar to scroll through the Bluetooth device options. Touch the touch bar to select the speaker or earphones to which you want to connect.

On some Bluetooth speakers or earphones, you might hear a "connected" announcement.

Bluetooth Support for Starkey Hearing Aids.

Version 9.4 supports wireless streaming to Starkey Livio Edge AI hearing aids.

To pair with Starkey hearing aids, follow the normal protocol for Bluetooth pairing with OrCam MyEye. Starkey hearing aids' pairing mode is activated simply by powering the hearing aids off and then on. This triggers the pairing mode for 2 to 3 minutes.

Note that OrCam MyEye cannot be connected to the MyEye mobile app while connected to the Starkey hearing aids.

Mobile App.

Use the "MyEye 2" app to customize your OrCam MyEye's settings, control reading navigation, find your device if you misplace it, and play tutorials to learn how to use the device. To use the app, you will need to first connect your OrCam MyEye to your smartphone.

Note: The app is currently available only to iPhone and iPad users.


Installation.

To download the "MyEye 2" app, go to the app store on your smartphone. Search and download the "MyEye 2" app.

Pairing.

Make sure that your smartphone's Bluetooth mode is turned on before pairing your OrCam MyEye to the app. Follow the onscreen instructions while pairing the device (as provided below).

1. Hold your OrCam MyEye vertically with the camera pointing towards the ceiling and close to your smartphone.
2. Enter your name and email to receive a confirmation code.
3. A confirmation code will be sent to your email. Check your email and write the confirmation code within the "MyEye 2" app.
4. Read the Terms & Conditions. Once you have finished reading you may hit the Accept button.
5. Congratulations! Your OrCam MyEye is now paired with the "MyEye 2" app!


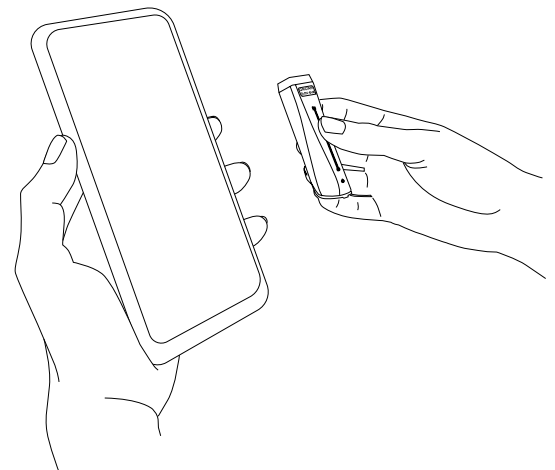


App Usage.

Note: To use the app, your OrCam MyEye device must be powered on, not powered off or in the Suspend mode.

The main screen contains the following features:

- **Battery Indicator** - An image that shows the battery charge percentage of your OrCam MyEye. If voiceover is enabled on your smartphone, the app will announce the battery charge percentage.
- **Find** Icon - If you lost or misplaced your OrCam MyEye while it is powered on and connected to the app, press this icon to make your device continuously beep. Press the icon again to stop the beeping.
- **Learn** Icon - Press this icon to access the OrCam MyEye tutorials found on the OrCam website.
- **Settings** Icon - Press this icon to easily access, view, and change the settings of your OrCam MyEye through the app in real-time instead of manually changing them on your device.
- **Control** Icon - Press this icon to access the remote control panel. The remote control panel contains the following icons:
 - **Play/Pause** Icon - Press this icon to have OrCam MyEye:
 - Start a reading session by taking a picture of the desired text.
 - Pause reading.
 - Resume reading.
 - **Stop** Icon - Press this icon to stop the reading session.
 - **Fast Forward** Icon - Press this icon to skip to the next sentence during the reading session.
 - **Rewind** Icon - Press this icon to go back to the previous sentence during the reading session.
 - **Volume Bar** - Move the volume bar to set the volume. OrCam MyEye will announce whether the volume level was raised or lowered, as well as when you reach the minimum or maximum volume level.

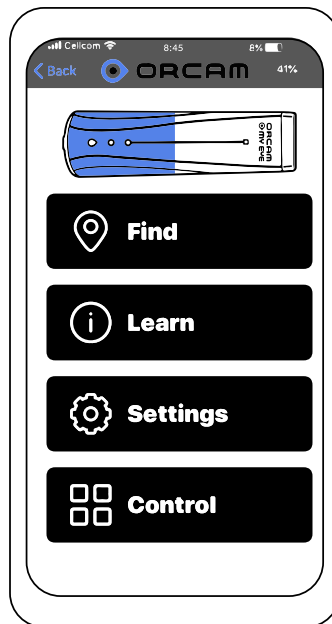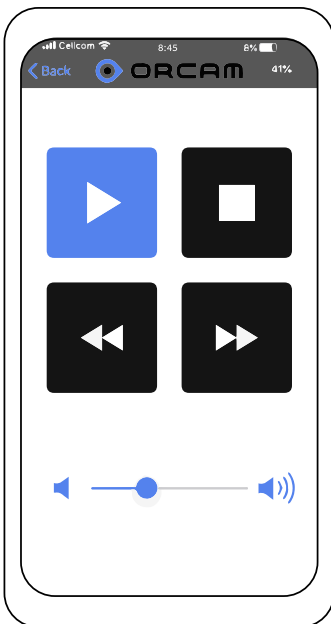

Notes on Mobile App.

- Do not allow unauthorized users access to your "MyEye2" app. They might, unwittingly, change your settings, which may create an inconvenience for you.
- The language of the Settings section in the "MyEye2" app is determined by the system language of your OrCam MyEye device, not by the language of your phone or app.

Settings.

Customize your device's settings via the audio settings menu.

Audio Settings Menu.

To enter, while long pressing the power button, swipe the touch bar and then release the power button.

Once you are in the audio settings menu, listen carefully to the audio instructions. Touching the touch bar confirms the selected option; swiping along the touch bar browses through the options. Double-tapping the touch bar either sends the device back to the main menu or exits the audio settings menu.

If you do not make a selection, the device will repeat the same message. If no action is made before 30 seconds transpire, the device will automatically exit the audio settings menu.

Audio Settings Menu Layout

- **Reading Rate Menu**

- This setting determines how fast your device speaks to you and reads text. You may set the reading rate level between 1 and 10, with 1 being the slowest setting and 10 being the fastest setting.

- **Volume Menu**

- You may set the volume level between 1 and 10, with 1 being the quietest setting and 10 being the loudest setting.
- OrCam MyEye will announce whether the volume level was raised or lowered, as well as when you reach the minimum or maximum volume level.

- **Reading Settings Menu**

- Set Date Format
 - You can change the date format between "month day year", "day month year", and "year month day". This is to ensure that the device will read dates properly in texts.
- Enable or Disable Automatic Page Recognition
 - Enabling automatic page recognition allows the device to read text from pages without pointing your finger or touching the touch bar. You may enable or disable the feature here.
- Set Automatic Page Recognition Time
 - Set the amount of time your device waits before automatically starting to capture and read text.
- Enable or Disable Reading Navigation
 - Reading navigation allows you to fast forward, rewind, or pause while reading. You may enable or disable the feature.
- Enable or Disable Beeping when Paused during Reading
 - You may enable or disable beeping sounds when the device is paused during reading.
- Set Reading Navigation Pause Time
 - Reading navigation pause time determines how long the reading is paused before it is automatically cancelled. You may set the reading navigation pause time to between 30 seconds and 5 minutes.

- **Language Settings Menu**

- System Language Menu
 - The system language is the language in which the device talks to you when making any announcements.

- You may change the system language to any of the installed languages on your OrCam MyEye.
- Reading Language Menu
 - The reading language is the language in which the device reads text to you.
 - You may change the reading language to any of the installed languages on your OrCam MyEye.
 - You may also set the reading language to "Automatic Detection" in which the device will automatically detect and read text in any of the installed languages.
- **Country Settings Menu**
 - Device Country Menu
 - Setting the country will change some parameters and settings, such as the time zone, time, and flicker rate of your device, so it can perform better within the chosen country. Your device will restart upon exiting the audio settings menu.
 - **Note:** Changing the country will not change settings such as reading and system languages.
- **Gesture Settings Menu**
 - Enable or Disable Stop Gesture
 - Stop gesture enables you to stop an active reading or learning process. You may enable or disable the feature.
 - Enable or Disable Watch Gesture
 - You can hear the current time and date when using the watch gesture. You may enable or disable the feature.
 - Configure Gesture Sensitivity Level
 - You may set the sensitivity level of the gesture feature to low, medium, or high sensitivity.
- **Face Settings Menu**
 - Change Face Recognition Settings
 - Face recognition settings determine in which cases a face will be announced, either manually by touching the touch bar, automatically for all learned faces, fully automatically in which either learned faces or the gender or amount of unknown faces are announced, or you may choose to disable the feature instead.
 - Set Face Repetition Time
 - Face repetition time sets the amount of time to wait before announcing the same person again. You may set the time to between 5 seconds and 10 minutes.
 - Review Learned Faces
 - If there are no learned faces, the device will state that there are no learned faces.
 - If there is at least one learned face in the device, you will be able to select and do one of the following options with a learned face:
 - » You may delete the learned face.
 - » You may record a new name for the learned face.
 - » You may take another picture of the learned face.
 - Delete All Learned Faces
 - Selecting this option will delete all learned faces.
 - Configure Face Recognition Sensitivity Level
 - You may set the sensitivity level of the face recognition feature to low, medium, or high sensitivity.
 - Enable or Disable Face Learning Instructions
 - Face learning instructions are announced when holding the touch bar for a long time while there is a person in front of you. You may enable or disable the feature.
 - Change Face Feature Announcements
 - Gender announcements
 - » OrCam MyEye can tell you the gender of the unrecognized person in front of you. You may

enable or disable the feature.

- Age announcements
 - » OrCam MyEye can tell you whether the unrecognized person in front of you is a man or woman, a young man or a young woman, or a child. You may enable or disable the feature.
- **Product, Barcode, Banknote, and Color Recognition Settings Menu**
 - Change Product Settings
 - Review Learned Products
 - » If there are no learned products, the device will state that there are no learned products.
 - » If there is at least one learned product in the device, you will be able to select and do one of the following options with a learned product:
 - You may delete the learned product.
 - You may record a new name for the learned product.
 - You may take another picture of the learned product.
 - Delete All Learned Products
 - » Selecting this option will delete all learned products.
 - Enable or Disable Product Recognition
 - » You may enable or disable the feature to recognize products.
 - Change Barcodes Settings
 - Review Learned Barcodes
 - » If there are no learned barcodes, the device will state that there are no learned products.
 - » If there is at least one learned barcode in the device, you will be able to select and do one of the following options with the learned barcode:
 - You may delete the learned barcode.
 - You may record a new name for the learned barcode.
 - You may take another picture of the learned barcode.
 - Delete All Learned Barcodes
 - » Selecting this option will delete all learned barcodes.
 - Change Barcode Recognition Settings
 - » Barcode recognition settings determine in which cases a barcode will be announced, either manually by touching or pointing at it, automatically, or you may choose to disable the feature instead.
 - » You may either enable automatic or manual barcode recognition or disable the feature.
 - Change Bills Settings
 - Change Banknote Recognition Settings
 - » Banknote recognition settings determine in which cases a banknote will be announced, either manually by touching or pointing at it, automatically, or you may choose to disable the feature instead.
 - » You may either enable automatic or manual banknote recognition or disable the feature.
 - Change Banknote Currency Settings
 - » Your device can recognize many currencies from around the world based on your locale.
 - » You may enable or disable recognition of any of the currencies that are preloaded onto your device.
 - Change Colors Settings
 - Enable or Disable Color Recognition
 - » You may enable or disable the feature to recognize colors.
- **Orientation Settings Menu**
 - Door Announcements
 - You may enable or disable the feature to recognize doors.
 - Stairway Announcements
 - You may enable or disable the feature to recognize ascending stairs.
 - Chair Announcements

- You may enable or disable the feature to recognize chairs.
- Rounded Container Announcements
 - You may enable or disable the feature to recognize round containers, such as cups, glasses, jars, and bottles.
- Table Announcements
 - You may enable or disable the feature to recognize tables.
- Screen Announcements
 - You may enable or disable the feature to recognize digital screens, such as television or computer screens.
- **Connectivity Settings Menu**
 - Bluetooth Settings Menu
 - Connect to a Bluetooth audio device.
 - » Use this option to connect your OrCam Read to a new Bluetooth audio device.
 - Retrieve the name of the connected Bluetooth audio device.
 - » Use this option to retrieve the name of the connected Bluetooth audio device.
 - Disconnect from the connected Bluetooth audio device.
 - » Use this option to disconnect from the connected Bluetooth audio device.
 - Forget all Bluetooth audio devices.
 - » Use this option to forget all Bluetooth audio devices from your OrCam Read.
 - WiFi Settings Menu
 - Connect to a WiFi Network using the QR code.
 - » Use this option to connect your OrCam Read to a WiFi Network using the QR code.
 - Retrieve the name of the connected WiFi.
 - » Use this option to retrieve the name of the connected WiFi.
 - Remove all WiFi networks.
 - » Use this option to remove all WiFi networks from your OrCam Read.
 - Check the status of the internet connectivity.
 - » Use this option to check the status of the internet connectivity.
- **General Settings Menu**
 - Voice Menu
 - Change the voices of each language.
 - Set Time
 - The device will announce the current time and date. You will be able to change the timezone, year, month, day, hour, and/or minute of the time and date here.
 - Enter Tutorial
 - You will be able to enter the practice tutorial here. Please note that you must have the Practice Booklet with you for the feature to work.
 - Set Automatic Suspend Time
 - Automatic suspend time determines the time the device will wait in an idle state before entering the Suspend mode. You may set the time to between 2 minutes and 30 minutes.
 - Feedback Sounds Menu
 - Enable or Disable Touch Bar Sounds
 - » Touch bar sounds indicate whenever you are touching the touch bar. You may enable or disable the feature.
 - Enable or Disable Processing Sounds
 - » Processing sounds indicate the device is processing the captured images. You may enable or disable the feature.
 - Enable or Disable Announcements on Automatic Suspend and Resume
 - » These announcements indicate whether the device will announce "Suspended" and "Waking up" or make a double beep sound upon automatic suspension of the device and subsequently awakening the device.

- » Enabling this feature means that OrCam MyEye will announce "Suspended" and "Waking up" upon automatic suspension of the device and subsequently awakening the device.
- » Disabling this feature means that OrCam MyEye will make a double beep sound without announcing "Suspended" or "Waking up" upon automatic suspension of the device and subsequently awakening the device.
- » You may enable or disable the feature.
- Reset User Settings
 - You will be able to reset all of the user settings back to the original default settings. Any learned products or faces will be permanently deleted.
- Change Camera Light Compatibility
 - You can change the flicker rate to either 50 or 60 Hz depending on your region. It is recommended to choose the setting based on your location.
 - If you do not know the flicker rate of your location, we recommend changing the country settings of your device in the Country Settings Menu.
- Enable or Disable Light Conditions Notification
 - Light conditions notification will test if there isn't enough light for the device to work and tell you so. You may enable or disable the feature.
- Enable or Disable Automatic Flash
 - Automatic flash will turn on the device lights in case you point or touch and there isn't enough light for the device to work. You may enable or disable the feature.
- Configure Vocal Commands
 - OrCam vocal commands can be used to easily control your OrCam MyEye, change settings, or receive information.
 - Vocal commands settings determine in which cases a vocal command can be used, either manually by double-tapping, fully either by saying, "Hey OrCam" or by double-tapping, or you may choose to disable the feature instead.
- OrCam Contact Information
 - You can retrieve OrCam's contact information here.
- Reset Installation Retries
 - If you have failed to upgrade your device, this feature will allow you to reset your device to successfully upgrade without losing your learned data.
- Device Serial ID
 - You can retrieve the device's serial ID with this option.
- Version Information
 - You will hear the full version information of the device by selecting this option, including all supported languages and features.
- **Exit**

Terms and Conditions.

Your use of your OrCam device (the "Product") is subject to the Terms and Conditions found at orcaml.com/terms-and-conditions. Your agreement to these Terms and Conditions is a condition to your use of the Product.

Please read the User Manual in full, including the important Safety Instructions, before using your OrCam device. Do not use your OrCam device until you have received in-person or online training by an authorized OrCam Trainer™ or OrCam Training Program. OrCam can take no responsibility if the Product was used other than in accordance with the instructions in the User Manual. Products should not be relied upon in circumstances that are potentially life- or health-threatening or that could lead to financial loss. OrCam devices should especially never be relied upon to drive vehicles or operate heavy machinery of any kind. OrCam shall not be responsible in the event that Products are used in such situations. OrCam may receive information from third parties (i.e. Barcodes of Grocery Products in selected countries). OrCam received Barcode information from Barcodes of Grocery Products in Australia and New Zealand from GS1 Australia. OrCam accepts no responsibility for the accuracy of the information obtained from third parties.

Privacy.

OrCam thinks highly of your privacy and we are committed to protecting and safeguarding our clients' and users' personal information. Please read our Privacy Policy found at <https://www.orcam.com/privacy-policy/>, which describes how we process personal data regarding our clients and users in connection with services provided by us, our website, and the OrCam Read mobile application (the "Services" and the "App", respectively); the types of personal data we collect and process; to what purposes we use and process your personal data; how your personal data is protected; and with whom your personal data may be shared. It is important for us to enable you to understand our privacy policy and your rights in connection with the personal data we hold about you. You should also be aware that we use cookies and similar technologies to collect and save information when you visit our website, available at www.orcam.com, to ensure that we give you the best possible experience. To learn more about the use of such technologies, please see our Cookie Policy at <https://www.orcam.com/en/cookies-policy/>.

If you feel that a concern you have in connection with your privacy has not been met by the Privacy Statement, please contact us at privacy@orcaml.com and let us know.

If you choose to download the App or use, interact with, register, or provide data to us in connection with the Services, you explicitly agree to the use of such data in accordance with this Privacy Statement. You may not use the Services or submit any data to us if you do not agree to any of the terms hereunder. This Privacy Statement shall not be construed in any manner to derogate from our Terms of Conditions or any other agreement made by and between OrCam and you.

Warranty.

Customer acknowledges that, other than as explicitly stated herein, OrCam does not make any representations or warranties to Customer regarding the Product, its functions or any images it produces.

The OrCam end-user limited product warranty (the "Limited Warranty") covers the owner of an OrCam product against defects in material or workmanship at the time of its original purchase, for a subsequent period of one (1) year, and for any additional applicable legal warranty period. Original proof of purchase/delivery is required from the owner in order to obtain this coverage. OrCam will repair or replace, at its discretion, any product that is determined by OrCam to be covered under this Limited Warranty. OrCam will not be responsible for conditions arising as a result of intentional damage or misuse of the product. The owner is responsible for the costs of shipping the product to the location specified by OrCam.

This Limited Warranty is the sole and exclusive warranty applicable to OrCam products. No third party has the authority to make any representation, warranty, or agreement on behalf of OrCam with respect to OrCam products. No warranty of any kind or nature is made by OrCam beyond those expressly stated herein.

In no event shall OrCam be liable for any special, collateral, indirect, punitive, incidental, consequential, or exemplary damages in connection with or arising out of the use of the product. In no event shall OrCam's liability exceed the price paid for the product. Without limiting any provisions limiting liability under this agreement, the limited warranty set forth herein will not apply, and the owner will reimburse OrCam for any costs and expenses incurred in the event that:

- (i) the product has been used other than in accordance with the product documentation and terms of use or other written operating instructions provided by OrCam
- (ii) the product has been subject to tampering, misuse, negligence, or accident
- (iii) the product or parts identification labels have been removed or the product has been otherwise altered
- (iv) the product has been opened, modified, repaired, serviced, maintained, or altered by someone other than an authorized OrCam representative
- (v) the product has been combined with software, hardware, or other equipment not supplied by OrCam or not approved in writing by an authorized OrCam representative
- (vi) the product has been intentionally damaged or exposed to water, heat, or high voltage
- (vii) the product has been used by a person who has not completed training by an authorized OrCam Trainer™

Any parts replaced pursuant to this warranty will be under warranty for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. To register your device for warranty, please

visit the warranty registration website: <https://discover.orcam.com/warranty>.

If you believe that your product needs warranty support, contact support@orcaml.com. You will be responsible for shipping costs. However, if it is determined that the warranty request is valid, OrCam will pay the total cost of shipping the repaired or replaced product.

ORCAM DISCLAIMS ANY AND ALL WARRANTIES, WHETHER EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT OF THIRD-PARTY RIGHTS, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ORCAM DOES NOT WARRANT THAT THE PRODUCT WILL BE ERROR-FREE OR "BUG"-FREE, WILL OPERATE WITHOUT INTERRUPTION, THAT ANY IMAGES OR SOUNDS PRODUCED BY THE PRODUCT WILL BE ACCURATE OR THAT THE OPERATION OF THE PRODUCT WILL BE SECURE AND HEREBY DISCLAIMS ANY AND ALL LIABILITY ON ACCOUNT THEREOF. THIS SECTION SHALL BE ENFORCEABLE TO THE FULLEST EXTENT ALLOWED BY APPLICABLE LAW.

Refund Policy.

You can return your undamaged device for a refund within the period required by local law or as agreed between you and OrCam at the time of purchase. Training fees are non-refundable. Please contact your local representative or OrCam Support to initiate a return process. When you return the OrCam device, please follow OrCam Support instructions carefully. The device must be in the same condition that you received it and undamaged in any way. Your refund and how it is issued may differ based on how the device was purchased, its condition, and how long you've had the device. OrCam will process your return only after the carrier has received your device and delivered to OrCam. It usually takes up to three weeks for OrCam to receive (for international shipping involving local customs it may take longer) and process your return. Once OrCam issues your refund, it may take additional time for your funds to be made available in your account by your financial institution. For credit card payments, it may take 5 to 10 business days. If you have any questions, please feel free to contact the OrCam Support team.

FCC Compliance.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)

This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Warning.

Modifications not expressly approved by the manufacturer could void the user authority to operate the equipment under FCC Rules. NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

EU Authorized Representative for OrCam:

Arazy Group GmbH
The Squire 12, Am Flughafen,
60549 Frankfurt am Main, Germany
Telephone Number: +49 69 95932-5090

Applicable Standards.

OrCam MyEye 2 meets Annex VII of the medical device Directive 93/42/EEC and 2007/47/EEC and the essential requirements set out in Annex 1.

Applied Standards: EN IEC 60601-1. ETSI EN 301 489-1. ETSI EN 301 489-17. FCC Part 15, Subpart B. IEC/EN 60601-1-6. IEC 62366-1:2015. EN IEC 60601-1-2. EN 62304. RoHS Directive 2011/65/EU. WEEE. EN ISO 14971:2016. Council Directive 93/42/EEC of 14 June 1993 concerning medical devices.



Waste Electrical and Electronic
Equipment Directive Compliant
Contact OrCam for proper disposal.

RoHS

Restriction of Hazardous
Substances Directive Compliant
(materials and components)

FC

FCC ID:
2AAWI-MYEYE2REVB

CE

CE Compliant



Refer to User Instruction
Guide and Manual